

QUICK OPERATION GUIDE


CONTROL PANEL

(IB-8500/450/110)




REMOTE CONTROL

(IB-8500R/450R)

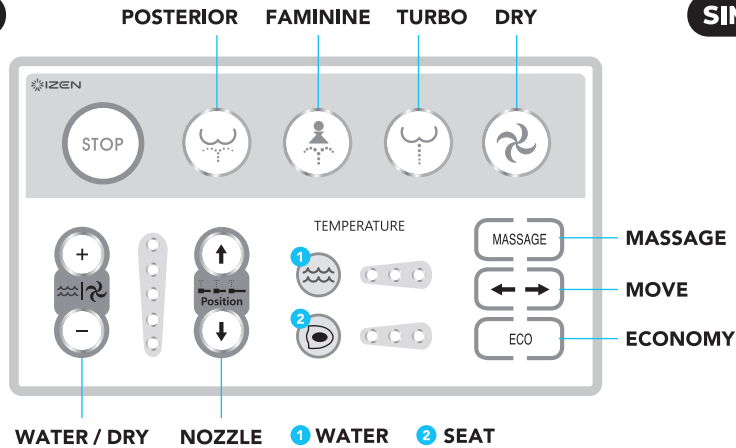

SIMPLE OPERATION PANEL

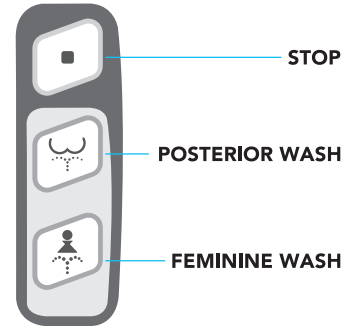


1 HAVE A SEAT

- Please sit down in a normal manner and the sensor will be activated.
- When occupied, '**Occupied sensor**' light will turn on.

2 SETTINGS

- Please adjust following settings to your preference: **High** + & **Low** -

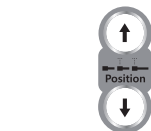

NOZZLE POSITION



WATER TEMPERATURE



SEAT TEMPERATURE

3 CLEANSING

- Press either '**Posterior Wash**', '**Feminine Wash**' or '**Turbo Wash**' to start cleansing.



POSTERIOR WASH



FEMININE WASH



TURBO WASH

- When finished, press '**Stop**' button to deactivate.
- Press '**Dry**' to further aid your cleansing process.

4 CAUTION

- Do not allow children to use '**Turbo Wash**' Function.

FURTHER

- **Remote Control models:** Manual Control Pad available on the side of the unit.
- During 'Posterior Wash' or 'Feminine Wash', **Massage** and **Oscillation** functions are available.
- **Economy:** Automatic setting for minimum Water Temperature and Power Usage.

